


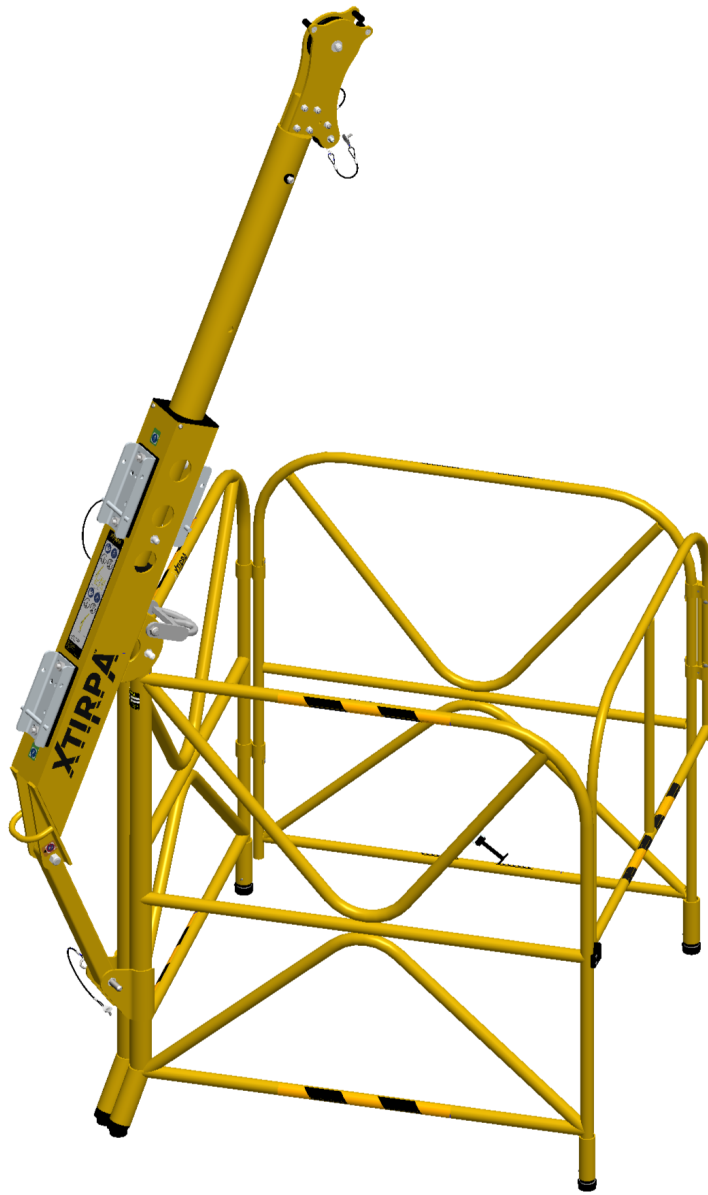

INSTRUCTION AND SAFETY MANUAL

IN-8002: XTIRPA™ 42" (1067 mm) Portable Guardrail System for PPE

EN

XTIRPA™

TABLE OF CONTENTS

1. THE XTIRPA™ SYSTEM	4
1.1 About this product	4
1.2 Compliance	4
1.3 Capacity, limits and design	5
1.4 Warranty.....	7
2. SYMBOLS	8
3. REQUIREMENTS IN TERMS OF SAFETY	10
3.1 Training	10
3.2 Precautions for Use.....	10
3.3 Authorized Connection.....	10
3.4 Lifting Materials	11
3.5 Collective fall protection	11
4. INSTALLATION	12
4.1 Installation instructions for the IN-2108 portable guardrail	12
4.1.1 IN-2108: Fully enclosed portable guardrail	12
4.1.2 IN-2108: Partially enclosed portable guardrail (position v)	14
4.1.3 IN-2108: Portable guardrail for large areas.....	16
4.2 Installation of the temporary anchoring system Davit arm	18
4.3 Installation of anti-tilt device (A2108-18 or A2108-20)	20
4.4 The installation of a self-retracting device will be done on anchorage points.	22
5. OPERATION	25
5.1 Anchor points	25
5.2 Multi-Users	26
5.3 Acceptable work angle	26
5.4 Acceptable work angle without risk of falling / recovery angle	27
6. INSPECTION, MAINTENANCE, AND STORAGE	28
6.1 Inspections	28
6.2 Maintenance.....	28
6.3 Storage	28
7. COMPONENTS	29
7.1 Temporary anchoring systems	29
8. APPENDIX	30
8.1 Labels	30
8.2 Calculation for ground clearance	31
8.3 Maintenance and Inspection Sheet.....	32
8.4 Registration form.....	33
8.5 Schematic Plan of the Installation	34

1. THE XTIRPA™ SYSTEM

1.1 About this product

The XTIRPA system™ is an Anchorage connector that forms part of a system of personal protective equipment for fall prevention, rescue, work positioning, rope access and confined space access.

WARNING

The manufacturer, Innova Public Utility Products, Inc., waives any warranty or responsibility in the event of an unauthorized modification, of any improper use, of poor maintenance, or of the replacement of a part of the equipment by non-original parts. These actions can result in serious injury or death.

No modification of or addition to the equipment may be made without the prior written consent of the manufacturer Innova Public Utility Products, Inc. Any repair must be made in accordance with the operating procedures of the manufacturer, Innova Public Utility Products, Inc.

This manual, together with technical drawings and installation instructions, is supplied with the purchase of the XTIRPA™ system. The user shall make sure these drawings and instructions are included and shall endeavor to keep all these elements for the entire life span of the equipment.

If the product is resold outside the first country of destination, it is essential for the safety of the user that the reseller supply the instructions for use, maintenance and periodic inspection in the language of the country where the product is to be used.

Please comply with all labor and safety regulations applicable in the country or province where you will be using this Anchorage connector.

For any question related to the use, maintenance, or installation of the XTIRPA™ systems, please contact the manufacturer, Innova Public Utility Products, Inc., via the contact form on our website: <http://www.xtirpa.com>

Ensure that the following additional information is also provided by the manufacturer or authorized distributors:

- Technical drawings
- Installation instructions

1.2 Compliance

Manufacturer:

Innova Public Utility Products, Inc
1040 boulevard Industriel,
Granby, Quebec, Canada
J2J 1A4

EN 795 Configuration System: Type B

The XTIRPA™ system described in this manual complies with the requirements of standard EN 795 2012, TS16415 2013, and the European regulation 2016/425 on PPE. The EU examination of Module B type was conducted by the following organization:

Quintin Certifications (CE2927)
825 route de Romans
38160 Saint-Antoine-l'Abbaye
France

Production control of Regulation (EU) 2016/425 Annex VIII (Module D) is carried out by the following body:

Quintin Certifications (CE2927)
825 route de Romans
38160 Saint-Antoine-l'Abbaye
France

The Anchorage connector's statement of compliance can be downloaded from our website at:

<https://academy.xtirpa.com/en/certifications>

1.3 Capacity, limits and design

All XTIRPA™ systems are designed to operate for 10 years provided they are used, maintained, inspected, and stored in accordance with this manual. The XTIRPA™ system is one of the lightest and most ergonomic Anchorage connector on the market. The davit arms, masts, and barricades are made of 6061-T6 aluminum. Some larger Davit arm are made from HSS A-500 steel. Adapters are manufactured in SS 304, SS 316, 44 W galvanized steel, or 50 W galvanized steel. Pulleys are made of acetal.

Product technical specifications

Manufacturer	Innova Public Utility Products, Inc
Brand	XTIRPA™
Model	IN-8002
Name	XTIRPA™ 42" (1067 mm) Portable Manhole Guard System for PPE
Standards	EN 795 2012 Type B
	TS 16415 2013
Equipment's maximum arrest force	8 kN\user

Davit arm – Part N°	IN-2210
Length	Min.: 12" (305 mm)
	Max.: 18" (457 mm)
Height	Min.: 79" (2006 mm)
	Max.: 95" (2419 mm)
Minimum breaking strength for anchorage	N° 1: 4,310 lbf (19.2 kN)
	N° 2: 4,310 lbf (19.2 kN)
	N° 3: 5,000 lbf (22.2 kN)
	N° 4: 2,200 lbf (9.8 kN)
Operating temperature	Max.: 130 °F (54 °C)
	Min.: -10 °F (-25 °C)
Elastic deformation	Not applicable
Max. work load/anchorage	420 lb (191 kg)

Mobile Adapter System	EN 795 2012 Type B
Maximum design torque	76,500 lbf•in (8,542 kN•m)
Simultaneous users (max.)	2
Weight	A2108-18: 3.5 lb (1.7 kg)
	A2108-20: 13 lb (5.9 kg)
	IN-2108: 15 kg (33 lb)
	IN-2210: 66 lb (30 kg)

The Anchorage connector must not be used beyond its limitations or for any purpose other than those for which it was originally intended, namely stopping a fall. It is understood that the Anchorage connector will only be used as an individual protection system against falls and not as lifting equipment.

WARNING

This system was not designed to work with more simultaneous users than intended. A user is defined as a person who is physically connected to an anchor connector.

 WARNING

This system cannot be used simultaneously to transport equipment when users are physically connected to an anchorage connector.

1.4 Warranty

The XTIRPA™ system offered by the manufacturer, Innova Public Utility Products, Inc., is warranted against manufacturing defects and material failure for a period of two (2) years from the date of shipment, and this warranty applies only to the original purchaser of the XTIRPA™ system. The manufacturer will promptly repair and replace any components or parts found to be defective. The manufacturer reserves the right to elect to return any allegedly defective part to its factory for inspection prior to making any repair or replacement.

Only those components or parts deemed defective by the manufacturer, at its sole discretion and following any inspection required and carried out by the manufacturer, will be repaired or replaced by the manufacturer.

All claims must be communicated in writing to the manufacturer, immediately after discovery of the defect by the owner, and must be accompanied by a copy of the original purchaser's proof of purchase. The manufacturer will issue a claim number and give precise instructions that must be followed to make a claim and return the defective parts. The owner will cooperate with the manufacturer and its representatives to allow inspection of any allegedly defective parts. All shipping costs to return defective parts and components to the manufacturer's factory will be paid by the owner. The cost of returning replacement parts or components is paid by the manufacturer.

The warranty does not cover damage to the equipment resulting from any cause other than a defect in material or workmanship, including, but not limited to, any damage resulting from abuse, lack of maintenance, improper handling or storage, willful damage, vandalism, accidental damage or damage resulting from impact or collision, damage that may result from transportation, damage caused by fire, explosion, chemical, toxic or corrosive vapors, substances or environments, water, normal corrosion or rust, storms, hail and other acts of nature, war or insurrection, acts of terrorism or other damage beyond the manufacturer's control. This warranty, which applies only to the original customer, is the only warranty that applies to the XTIRPA™ system and is in lieu of all other warranties, express or implied. Without limiting the generality of the foregoing, the manufacturer shall not be liable for any costs, damages or claims, including special, incidental or consequential damages such as, but not limited to, damages related to lost profits or revenue, business interruption, physical injury due to failure to follow instructions, or any other damages of good faith or reasonable care due to negligence, and any pecuniary or other loss, arising out of or in connection with the use or inability to use the XTIRPA™ system, even in the event of default, tort (including negligence), strict liability, breach of contract or breach of warranty, and even if the manufacturer has been advised of the possibility of such damages. The manufacturer hereby disclaims all warranties and conditions, express, implied or statutory, including, but not limited to, all implied warranties or conditions of merchantability, compliance with a particular purpose and freedom from negligence or workmanship issue.

The user must complete and return the limited warranty registration form for each product. Make sure that the XTIRPA™ system's purchase date from the manufacturer or authorized service center is indicated.

2. SYMBOLS

WARNING

Indicates a dangerous situation which, if not avoided, could lead to death or serious injury.

CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

Indicates a safe working condition.



Please read and understand the manual before using this system.



An authorized anchorage point on the system indicating the maximum number of simultaneous users wearing their Full-body harness. The system can also be used to lift and lower users.



The system can be used to lift and lower users.



The system cannot be used to lift or lower users.




The system equipment must be installed by a qualified person in accordance with the manufacturer's instructions.



Please perform a visual inspection before any use, in accordance with the Manual's instructions. Please do not use the system in case of doubt regarding its safe use.




Maximum working moment (MWM).

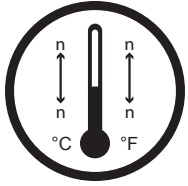

Minimum and maximum operating temperature.



Maximum workload.

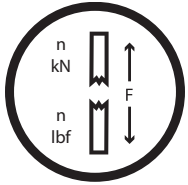

Minimum breaking strength (MBS).



Bolt tightening required




Maximum arrest force (MAF)



The pin must be fitted before use.



Minimum breaking strength (MBS) of 5,000 lbf (22.2 kN).

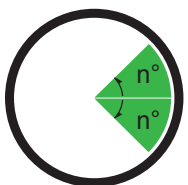

Operating angle.



It is forbidden to install more than one (1) user on the same anchorage point.

3. REQUIREMENTS IN TERMS OF SAFETY

3.1 Training

To work safely, every operator must be trained and competent. You can contact the manufacturer, Innova Public Utility Products, Inc., or an authorized service center to arrange a training program.

Users must have read and understood this manual. They must be in good physical health and medically fit, not be afraid of heights, and not be under the influence of drugs or alcohol, so as not to affect their safety during normal use of the equipment or in the event of an emergency.

3.2 Precautions for Use

Before use, a rescue plan must be put in place to deal with any emergencies that may arise during work. Of course, before and during use, it is essential to ensure that any such rescue is carried out safely and effectively. It is therefore important to always work in a team of at least two (2) people when using this Anchorage connector. One of the two (2) users can alert emergency services in the event of a fall.

All users must be equipped with a fall arrest Full body harness. This is the only body-gripping device permitted for use in a Fall arrest system (FAS), combined with a means of limiting the Maximum dynamic forces exerted on it when arresting a fall. Refer to Table "1.3 Capacity, limits and design" on page 5 for maximum stopping force.

It is also advisable to wear additional safety equipment appropriate for the job, such as, but not limited to, a hard hat, protective goggles, leather gloves, protective clothing, work boots and, if necessary, torches and respiratory protection.

WARNING

Prior to any use and to ensure safety, it is imperative that you check the clearance below the user in the work place, so that in the event of a fall, no collision with the ground can occur and no obstacle can be found on the trajectory.

To ensure that the device is usable and functions correctly, the operator should check the following before each use:

- The system does not present any excessive wear, cracks, or traces of corrosion.
- The anchoring plates (adapter) A2002-22N and the anchorage points do not show any deformation.
- The connection pins are present and properly installed.
- The nuts and bolts are tightened properly.
- The labels are present and can be read.
- The system has been tested and the date of the last or next inspection is shown.

WARNING

If the system has stopped a fall or has been damaged, it will then have to be immediately removed from service. Clearly indicate that the fall arrest system is 'UNUSABLE'. It must then be inspected and serviced in accordance with section "6. INSPECTION, MAINTENANCE, AND STORAGE" on page 28. It may only be put back into service if a Qualified person, an approved service center or the manufacturer authorizes its reuse in writing.

3.3 Authorized Connection

EN

This Anchorage connector can be used in conjunction with the following equipment:

- Automatic fall arrester EN 360 in accordance with the manufacturer's instructions for use.
- Lifesaving device EN 1496 in accordance with the manufacturer's instructions for use.
- EN 354 safety lanyards and shock absorbers in accordance with the manufacturer's instructions for use.

The above equipment must be connected to the sternal or dorsal points marked A or A/2 on the EN 361 Fall arrest harness by a connecting component complying with standard EN 362.

WARNING

Before use, check that all the equipment used in the fall prevention system (fall arrest harness EN 361, fall arrester EN 360, shock absorber EN 355 and connection components EN 362) is working correctly in accordance with the manufacturer's instructions for use. All the equipment used in the fall prevention system has not been tested in combination. A hazard is likely to occur when using multiple pieces of equipment in which the safety function of one of the pieces of equipment is affected by or interferes with the security function of another piece of equipment.

3.4 Lifting Materials

The Anchorage connector should only be used as personal protective equipment (PPE) against falls and not as lifting equipment. The product must not be used simultaneously for lifting equipment (material) and as PPE (personal protective equipment). In some countries/provinces, it is not permitted to use personal protective equipment (PPE) when lifting equipment. If this is the case, the product must be dedicated to lifting equipment (material) and can no longer be used as personal protective equipment (PPE). Never exceed 722 lbs (328 kg) when lifting equipment (materials).

3.5 Collective fall protection

Personal protective equipment (PPE) to protect against falls is essential to ensure worker safety, but it alone does not guarantee complete protection for everyone near the area where there is a risk of falling. Protective equipment therefore plays an equally crucial role in preventing accidents in the workplace.

Protective equipment, such as guardrails, safety nets, railings, etc., is designed to protect all workers on a site, including those who are not directly exposed to the risk of falling.

When used together, these protection strategies create a collective and structured approach that significantly improves worker safety and complies with occupational health and safety standards. For optimal safety, it is essential to assess and implement the protective measures available before using PPE.

4. INSTALLATION

Before use, contact the manufacturer, Innova Public Utility Products, Inc., or authorized distributors to determine the optimal installation process and configuration for your application. Follow all appropriate technical installation and fastening instructions provided by the manufacturer, Innova Public Utility Products, Inc.

In certain applications, the commissioning of the XTIRPA™ system may require additional precautions to:

- Limit the risk of falling during installation by installing an additional anchorage connector.
- Limit the possibility of damage to the system, such as use under excessive heat or humidity, in a corrosive or chemical environment, near a high tension power line, in a toxic or explosive atmosphere (non-exhaustive list).
- Avoid any injury to the user by limiting the use when there is a risk of falling objects and by taking all the necessary precautions regarding the tilting effects in the event of a fall.

⚠ WARNING

To ensure safety, the Anchorage connector must always be placed correctly, and the work must be performed in a way that reduces the risk of falls as well as the height of falls. To ensure optimal use, it is preferable that the anchorage connector be placed above the user's position.

⚠ WARNING

We advise users to avoid environmental hazards. Frequent inspections are required during the presence of environmental risks. Please refer to section "5. OPERATION" on page 25 to learn more.


4.1 Installation instructions for the IN-2108 portable guardrail

The IN-2108 portable guardrail is a component of the IN-8002 system and is classified as personal protective equipment (PPE) rather than a protective measure. It is not recognized as a guardrail according to regulatory standards, as it does not meet the horizontal load resistance requirements imposed on fixed or temporary guardrails. However, it is a valuable visual indicator, helping to prevent accidental access to hazardous areas. Its lightweight and portable design allows for quick installation and easy repositioning within the IN-8002 system, making it particularly suitable for dynamic or temporary work environments. The instructions below describe the proper method for installing the IN-2108 to ensure safe and effective use.


There are two methods for installing the IN-2108, depending on the size of the opening:

- Portable guardrail IN-2108 fully closed – Recommended for openings not exceeding 36 inches (0.9 meter) in any direction.
- Portable guardrail IN-2108 partially closed (Position V) – Recommended for openings greater than 36 inches (0.9 meter), when full closure is not possible.


4.1.1 IN-2108: Fully enclosed portable guardrail

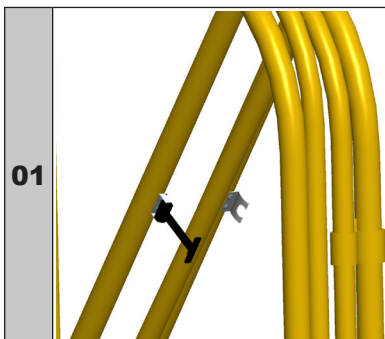


Remove the rubber lock.

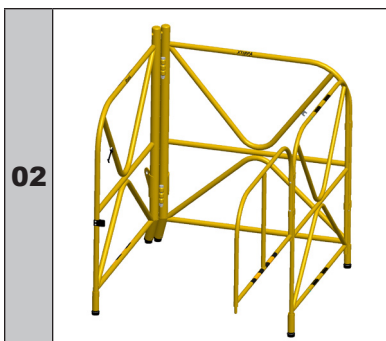


Open the IN-2108 portable guardrail to its maximum capacity.

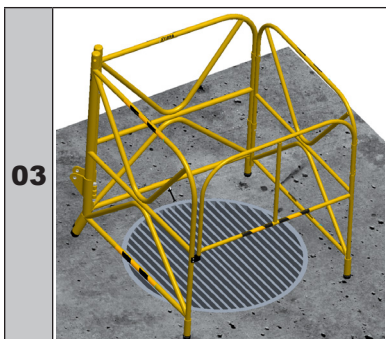


Position the IN-2108 portable guardrail around the work area.

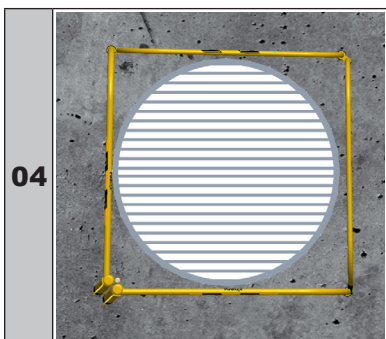


Ensure that the work area is centered within the perimeter of the IN-2108 portable guardrail.

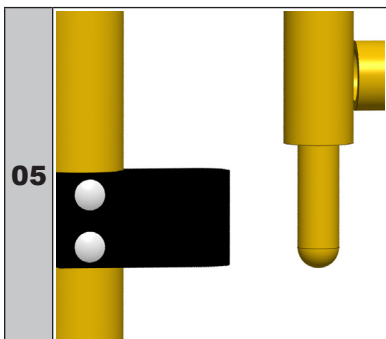


Close and lock the gate of the IN-2108 portable guardrail using the locking mechanism.

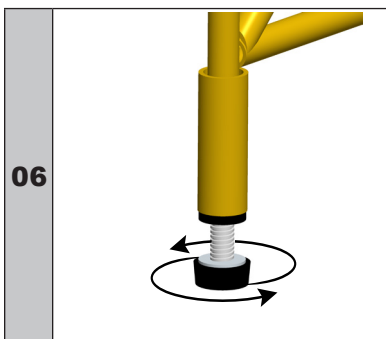


Level the IN-2108 portable guardrail by adjusting the leveling feet.

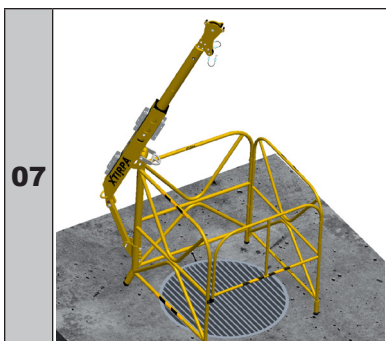

See section "4.2 Installation of the temporary anchoring system Davit arm" on page 18.

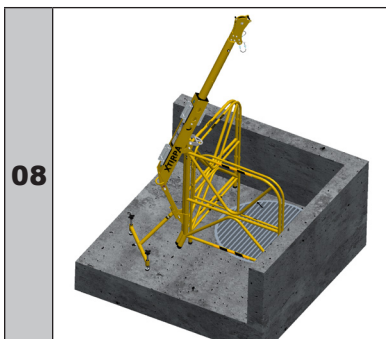


The A2108-18 or A2108-20 can be installed on the IN-2108 portable guardrail to improve its stability. Please refer to the section "4.3 Installation of anti-tilt device (A2108-18 or A2108-20)" on page 20 for instructions on when and how to install this system.

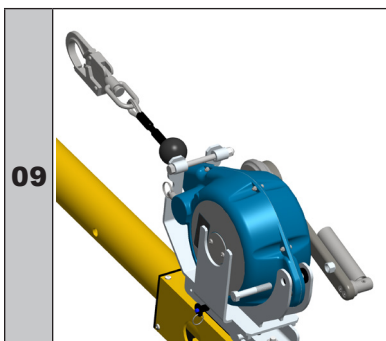


Please refer to the section "4.4 The installation of a self-retracting device will be done on anchorage points." on page 22 for instructions on when and how to install this system.


4.1.2 IN-2108: Partially enclosed portable guardrail (position v)

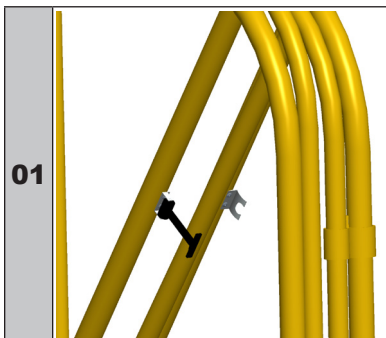


Remove the rubber Lock.

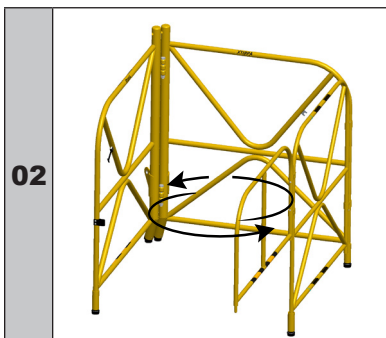


Open the IN-2108 portable guardrail to its maximum capacity.

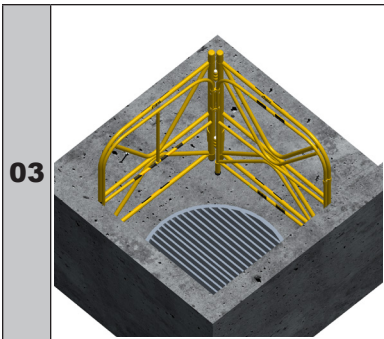


03 Position the IN-2108 portable guardrail around the work area. Fold the two sections of the IN-2108 portable guardrail together, one inside the other.

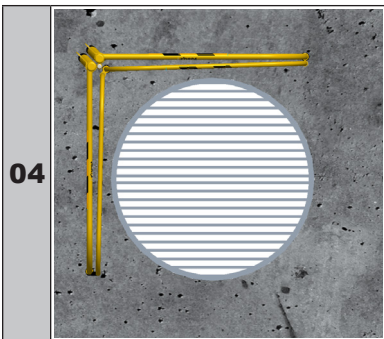


04 Ensure that the work area is centered within the perimeter of the IN-2108 portable guardrail.

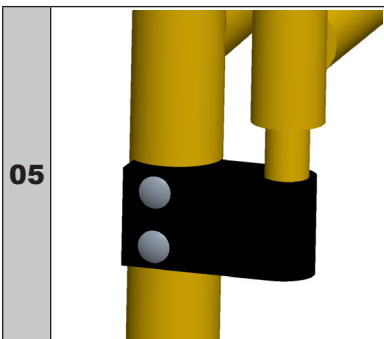


05 Close and lock the gate of the IN-2108 portable guardrail using the locking mechanism.

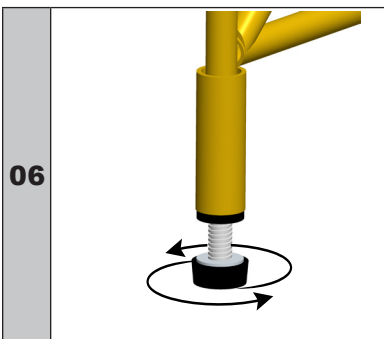


06 Level the guardrail by adjusting the leveling feet.

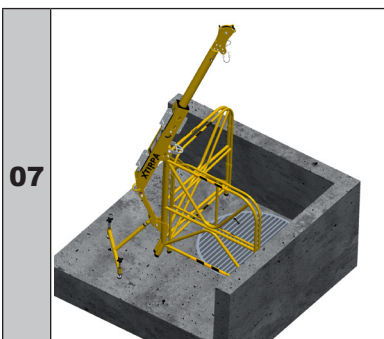

07 See section "4.2 Installation of the temporary anchoring system Davit arm" on page 18.

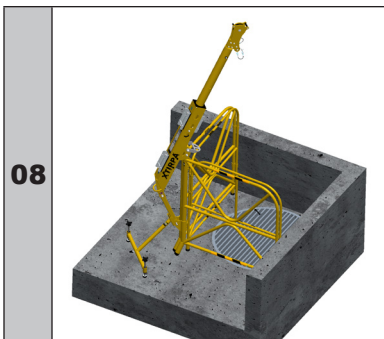

The A2108-18 or A2108-20 can be installed on the IN-2108 portable guardrail to improve its stability. Please refer to the section "4.3 Installation of anti-tilt device (A2108-18 or A2108-20)" on page 20 for instructions on when and how to install this system.

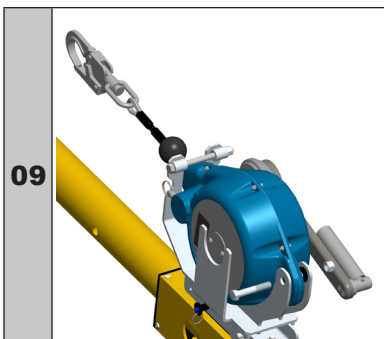

Please refer to the section "4.4 The installation of a self-retracting device will be done on anchorage points." on page 22 for instructions on when and how to install this system.

4.1.3 IN-2108: Portable guardrail for large areas

Installing the IN-2108 portable guardrail in a V-shape may require the addition of permanent fixed guardrails when used near large openings in a designated fall hazard area.

In this configuration, the IN-2108 portable guardrail is generally positioned behind the permanent fixed guardrails.


According to local safety standards, these fixed guardrails must be installed as close as possible to the locally designated fall hazard area.

In addition, local standards may allow temporary railings to be installed on the remaining sections of the large opening, provided that the IN-2108 portable guardrail is not positioned in front of them and that the Barricades are installed at a minimum safe distance from the edge of the fall hazard area.


Please refer to "3.5 Collective fall protection" on page 11 of this manual for detailed installation instructions.

The figure on the following page shows a typical installation for a large opening, using the IN-2108 portable guardrail in a V-shape, a permanent fixed guardrail (XTIRPA™ product: IN-6008), and a temporary railing (XTIRPA™ product: IN-2101), the complete IN-8002 system, and other support equipment.

Side view

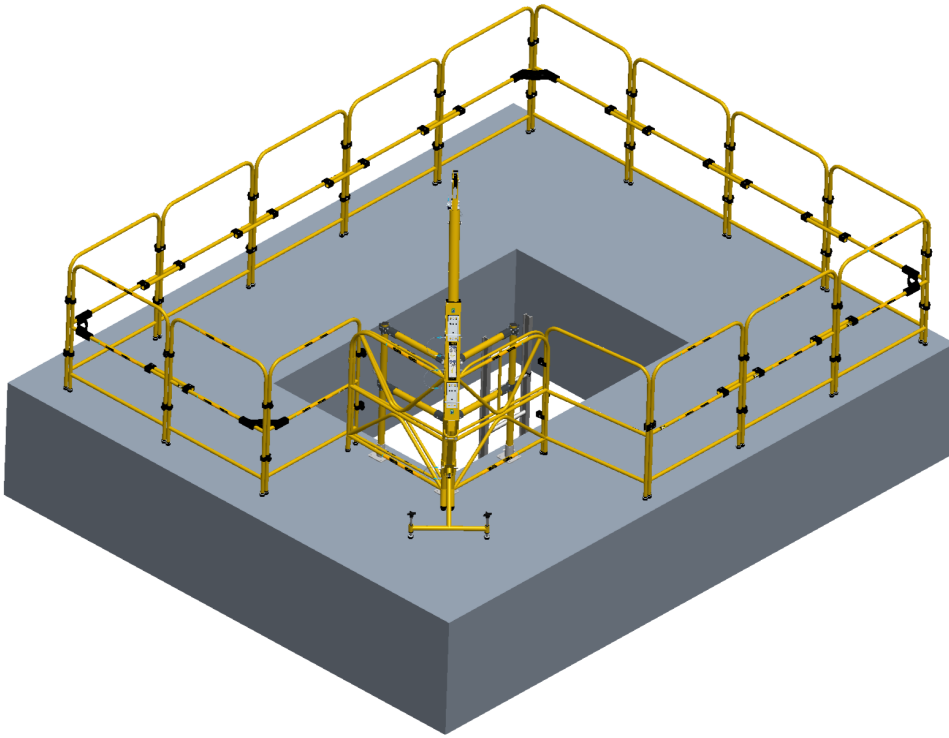


Plan view

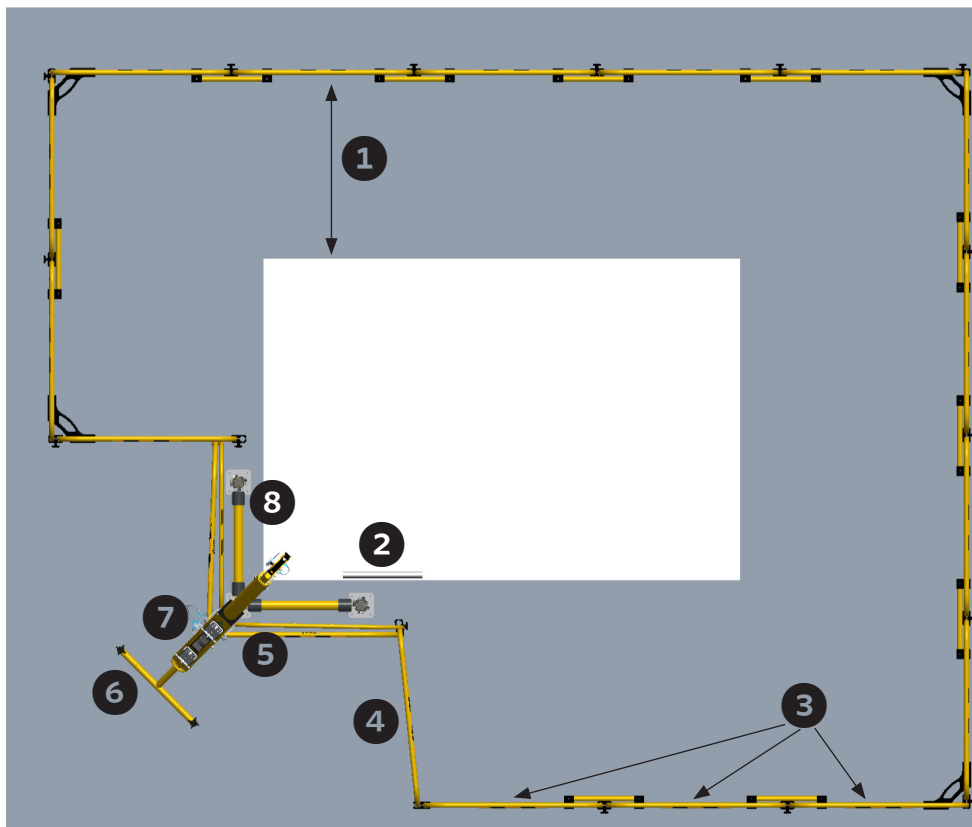


- 1** Minimum safety distance according to local regulations.
- 2** Ladder (support equipment).
- 3** Temporary railing (XTIRPA™ product: IN-2101).
- 4** Access gate
- 5** IN-2108 / IN-2324
- 6** A2108-18
- 7** IN-2210
- 8** Fixed guardrail (XTIRPA™ product: IN-6008).

4.2 Installation of the temporary anchoring system Davit arm


The system must be installed on a stable and level surface and must not be installed on uneven surfaces, including but not limited to sand, grass, gravel, and rocks. The installer must also ensure that the receiving surface can withstand the strength applied in the direction of the load in case of a fall. Please refer to the maximum resistance in the design (vertical) in section "1.3 Capacity, limits and design" on page 5.

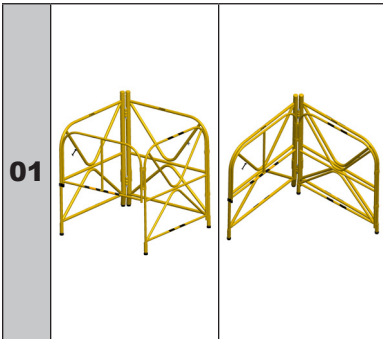


Complete the installation of the IN-2108 portable guardrail in accordance with the previous sections of the manual.

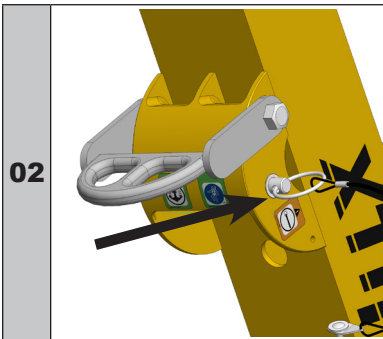


Remove the pin from its slot in the Davit arm.

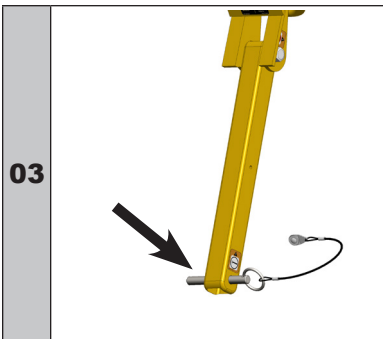


Remove the pin from the link.

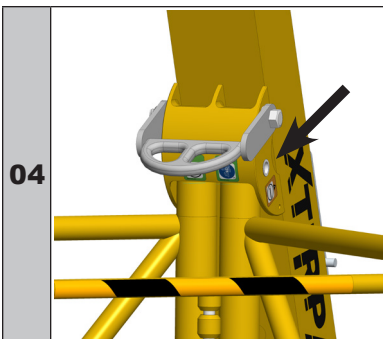


Install the Davit arm receptacle on the mast integrated into the IN-2108 portable guardrail.

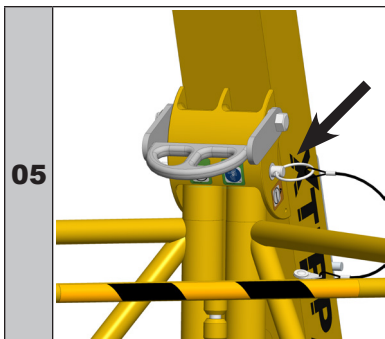


Insert the locking pin to secure the system.

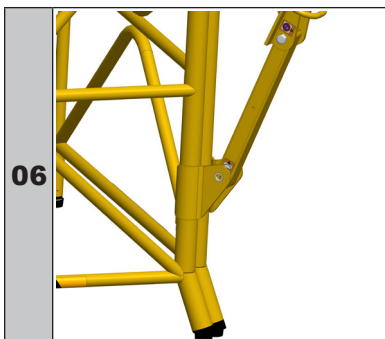


Install the Davit arm link between the eyelets of the IN-2108 portable guardrail.

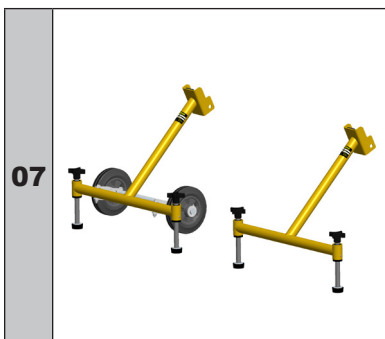


The A2108-18 or A2108-20 can be installed on the IN-2108 portable guardrail to improve its stability. Please refer to section "4.3 Installation of anti-tilt device (A2108-18 or A2108-20)" on page 20 for instructions on when and how to install this device.

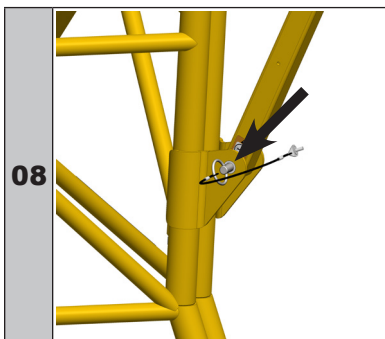

Insert the locking pin to secure the system.

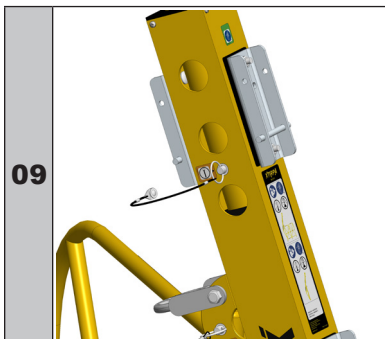


The reach of the Davit arm can be adjusted by first removing the locking pin from its location in the center of the Davit arm.

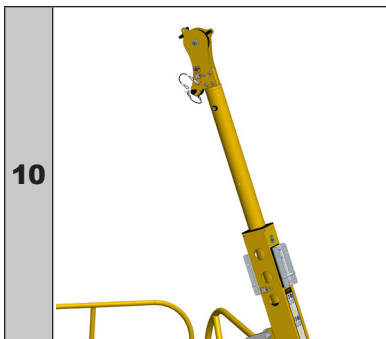

10


Extend the stem according to your needs (adjustable from 305 mm [12 in] to 457 mm [18 in]).

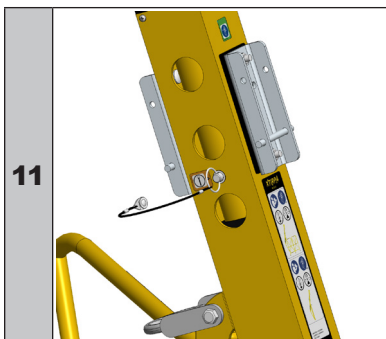

11


Insert the locking pin to secure the Davit arm in position.

4.3 Installation of anti-tilt device (A2108-18 or A2108-20)

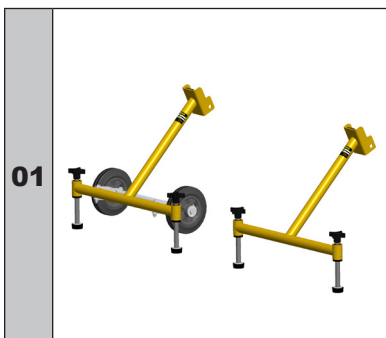


01

An anti-tilt device (A2108-18 or A2108-20) can be installed on the IN-2108 portable guardrail to improve its stability.

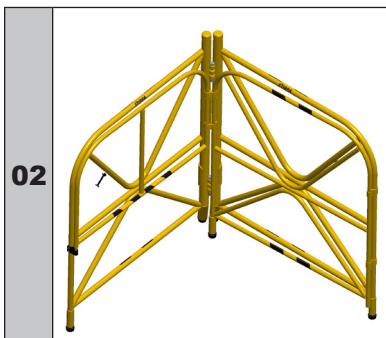


02

If the IN-2108 portable guardrail is configured in the V position, an anti-tilt device (A2108-18 or A2108-20) must be installed to ensure adequate stability.

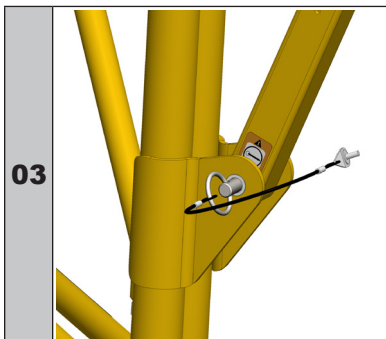


03


To install the anti-tilt device, start by removing the pin from the Davit arm link.

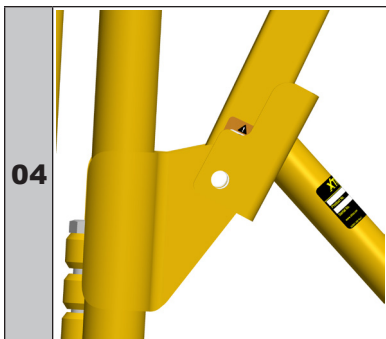


Position the anti-tilt device so that its mounting holes line up with the eyelets.

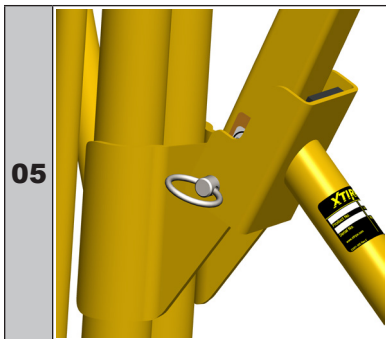

Secure the system by reinserting and locking the pin.

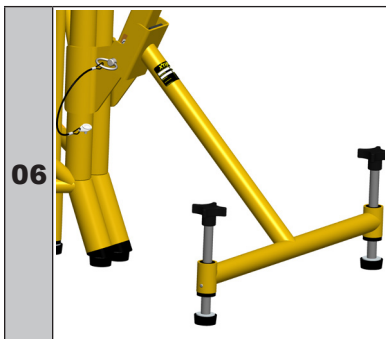


Adjust the rubber feet of the anti-tilt device by turning the knobs until the system is stable and firmly supported.

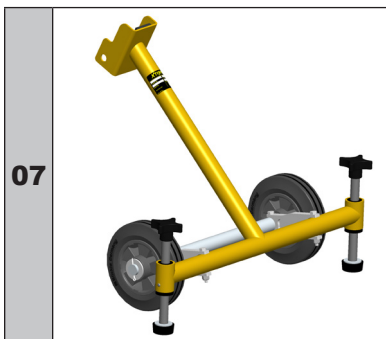

The A2108-20 model is equipped with wheels, which improves the portability of the system.




To move the system, adjust the legs to tilt it onto the wheels.

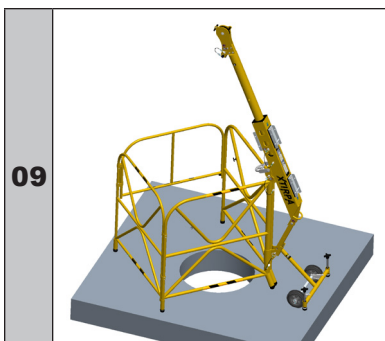

09

Move the system to the desired location and place it upright on its feet.

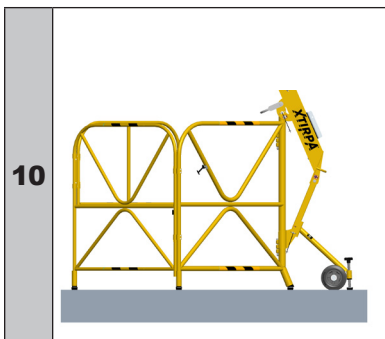

10


Adjust all feet to stabilize the system.

4.4 The installation of a self-retracting device will be done on anchorage points.




01

The IN-2210 Davit arm of the IN-8002 system is equipped with two (2) mounting plates (A2002-22/G/N) on the top, which serve as anchor points. Please consult section "5.1 Anchor points" on page 25 for more information. These anchor points (no. 1 and 2) allow for the installation of a self-retracting device and its respective lifeline.

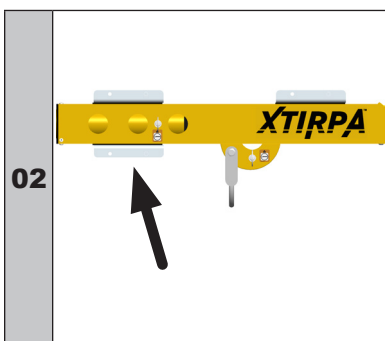

02


The IN-2210 Davit arm of the IN-8002 system is also equipped with one (1) mounting plate (A2002-22/G/N) on the underside, which does not serve as an anchor point for fall protection. This anchor point (no. 4) is intended solely for the installation of a lifting device and cannot be used to install a self-retracting device and its respective lifeline.

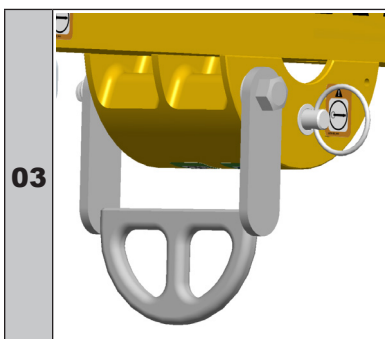

03


The IN-8002 system's Davit arm is equipped with an anchor point designed to facilitate the connection of a carabiner and can also serve as an anchor point. This anchor point has a higher minimum breaking strength (MBS); please refer to section 1.3 for more details.

04

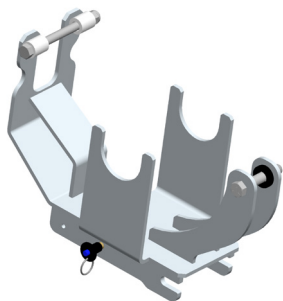

The installation of a self-retracting device begins with the installation of the corresponding mounting bracket. The appropriate mounting bracket for your device can be obtained from the manufacturer.

05

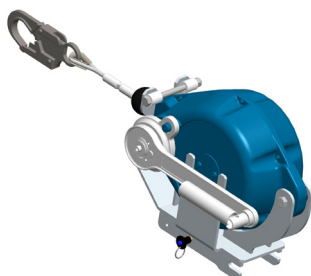

Install the self-retracting device or lifting device on the mounting bracket and secure it by locking it in place.

06




Select the mounting plate position (A2002-22/G/N) that best suits your application—either anchor position 1 or 2—and then install the mounting bracket.

07




Once the device is correctly installed on the mounting bracket, position the assembly on the Davit arm.

08

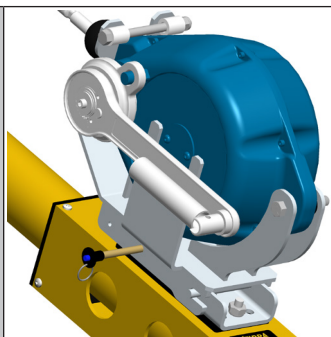

Insert the locking pin to secure the self-retracting device.

09

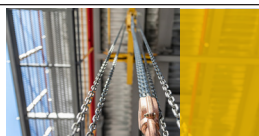


MAINTENANCE MANUAL
XTIRPA™ WINCH

Prepared for
the XTIRPA™ Service Center

XTIRPA


Please refer to the manual for the self-retracting device or lifting device for instructions on how to use it.

10

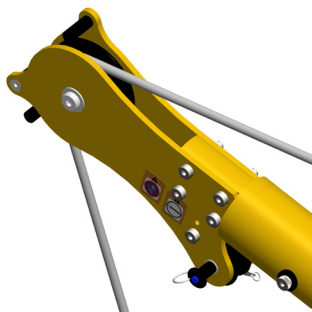

Unroll the required length of lifeline to position it between the pulleys on the Davit arm.

11

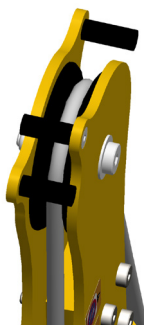

Position the lifeline on the pulley by passing it through the pins. The pins are designed to guide the lifeline safely and prevent it from coming off the pulley during use or in the event of a fall arrest.

5. OPERATION

WARNING

Section "3. REQUIREMENTS IN TERMS OF SAFETY" on page 10 must be read and followed closely. Failure to follow these instructions could result in injury or death.

WARNING

Make sure you avoid any fall or impact coming from objects in the trajectory of the fall or in its vicinity. Always remove any obstacles below the working area to ensure a clear fall path. Please make sure that the work zones are free of debris, obstructions, tripping hazards, spills, or any other risks that may hamper the safe use of the anti-fall system. DO NOT use the system before the work environment has been inspected by a qualified and competent person and they have determined that the risks identified could be eliminated and the exposure to these could be avoided.


Work directly under the anchor/anchorage connector, if possible. The free fall distance and the risk of falls increases when you are not working directly under the anchor/anchorage connector. A full body harness is the only acceptable body holding device that can be used in a fall arrest system.

WARNING

This system cannot be used under the influence of drugs or alcohol.

5.1 Anchor points

The IN-2210, part of the IN-8002 system, is equipped with three anchoring plates. Anchoring plates 1 and 2 are the only ones authorized for use as anchor points for employees, specifically designed for fall protection. The Anchoring plate 4 must not be used to connect a lifeline; it is intended exclusively for attaching a lifting device for recovery purposes. In addition, the IN-2210 includes an anchor point 3, designed for use with a carabiner. The Minimum breaking strength (MBS) of each anchor point is indicated in section "1.3 Capacity, limits and design" on page 5 of this manual and must be consulted before using the system. Please refer to the illustration below for more details.

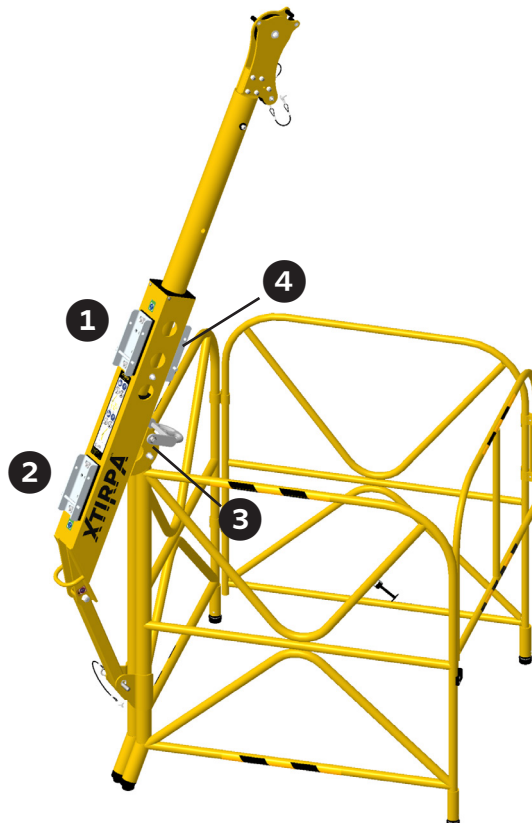


5.2 Multi-Users

The maximum number of simultaneous users can change according to the system configuration. It is essential to ensure that the system is used within its intended capacity to guarantee safety and compliance. For detailed information on the number of users allowed for each configuration, please refer to section "1.3 Capacity, limits and design" on page 5 of this manual.




5.3 Acceptable work angle

The acceptable work angle of a Fall arrest system (FAS) defines the safe working area in which the system must be used. It corresponds to the angular range, measured from the anchorage point, within which the worker can move or perform tasks while being exposed to a risk of falling. Using the system outside the acceptable work angle may compromise its operation, increase the fall distance, or even cause the system to fail. It is therefore essential to observe the specified acceptable work angle to ensure maximum safety during use. Please refer to the illustration below for more details.

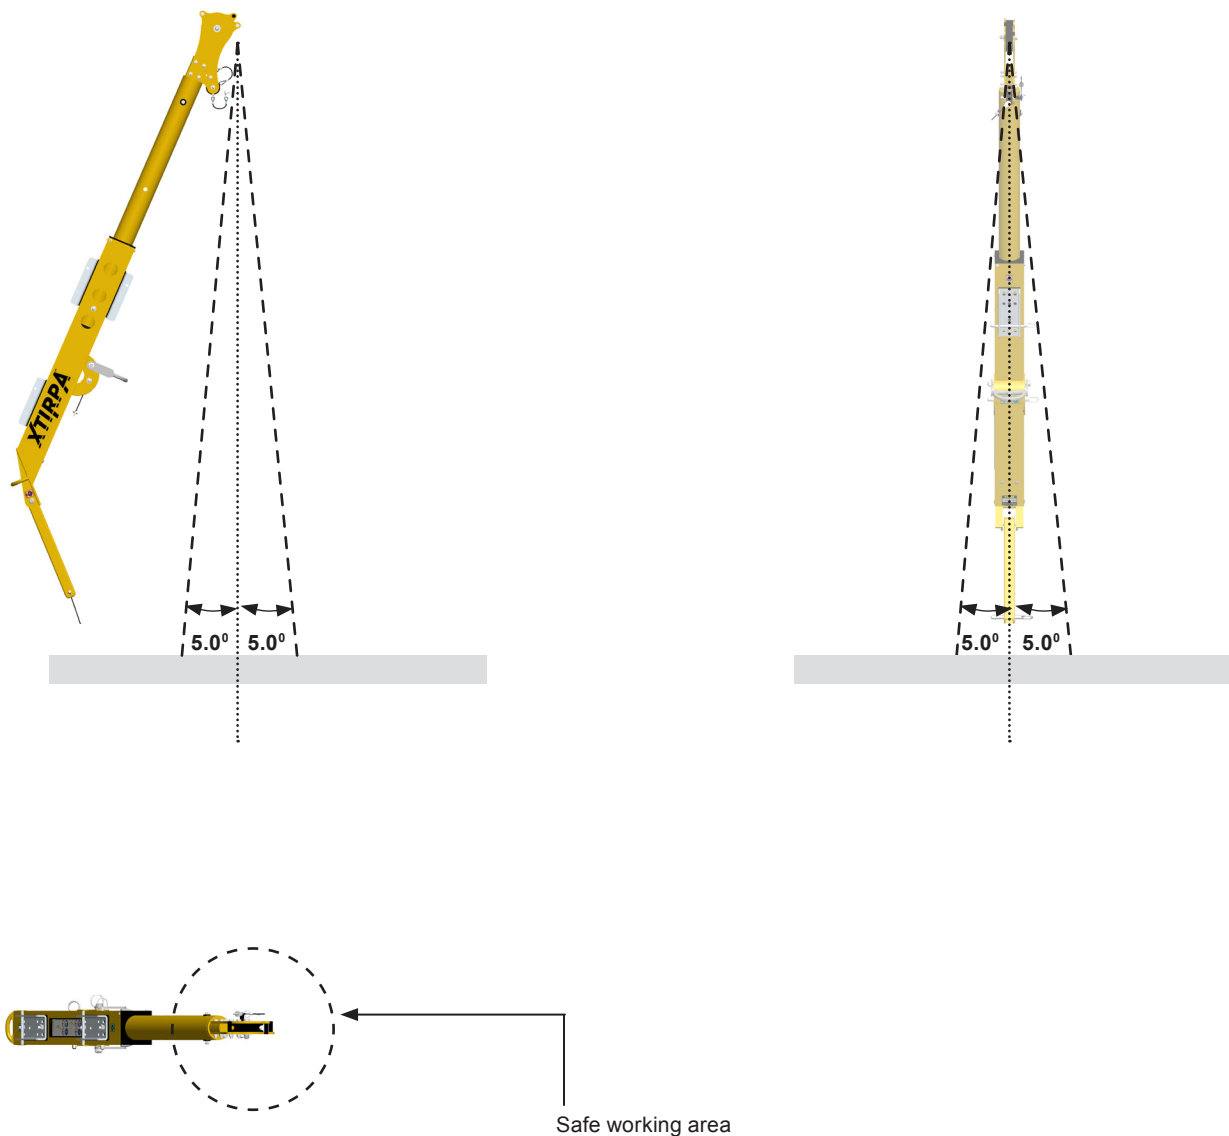

5.4 Acceptable work angle without risk of falling / recovery angle

This is the area in which the worker can move or work without being at risk of falling. For example, a worker climbs down a ladder while being protected by his fall arrest system: he is then in the acceptable work zone. Once he reaches the ground, he is no longer in a falling position. He can therefore move freely within a larger area without needing to remain secured. Please refer to the illustration below for more details.

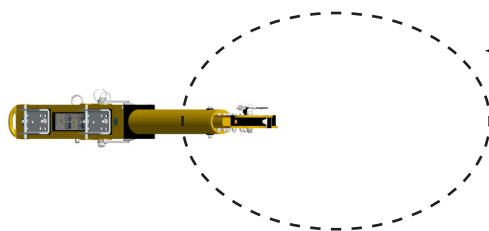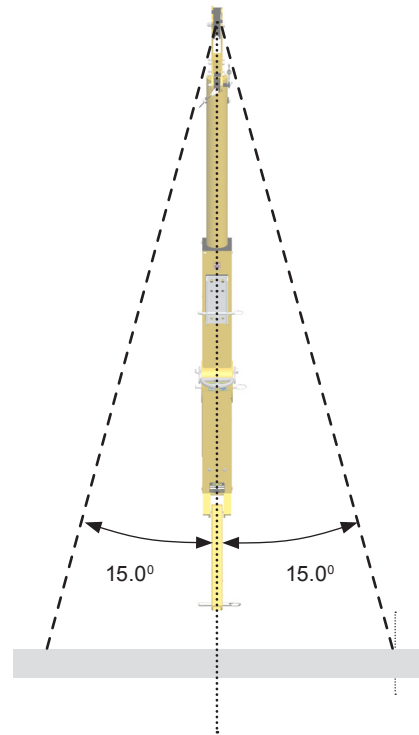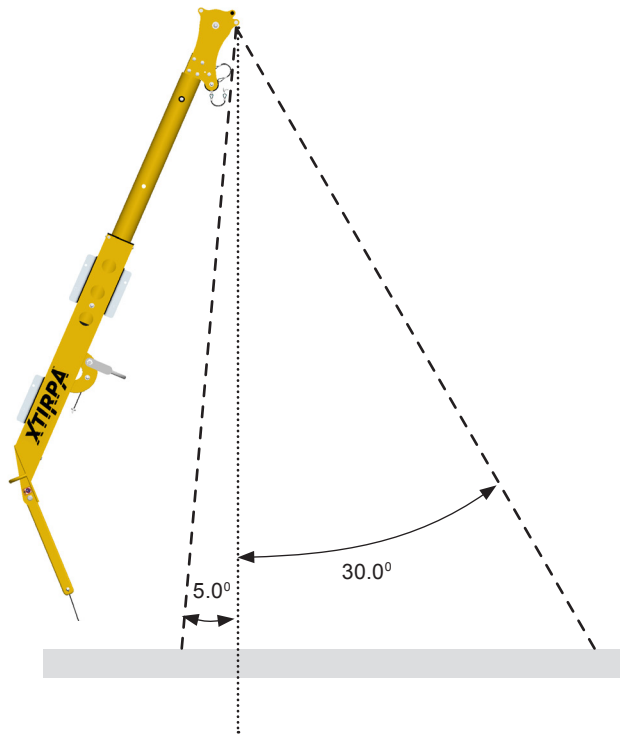

Safe working area without risk of falling / recovery angle.

6. INSPECTION, MAINTENANCE, AND STORAGE

All the systems have been designed to operate for at least 10 years provided that they have been used within the limits of their design, as well as maintained, inspected, and stored in accordance with this manual. Any system must immediately be removed from circulation if its safety is in doubt or if it was used to arrest a fall. It will then have to go through a proper inspection and maintenance, in accordance with this section.

6.1 Inspections

A visual inspection of the anchorage connector is required before using it to make sure it has no damage or defect. It is also required to carry out an annual inspection of the system by a qualified or competent person, according to the manufacturer's requirements or those of the service center. It is recommended to increase the frequency of these verifications when increasing the use of the system. These periodic verifications are necessary since user safety is directly related to regular maintenance or the repairing of system components.

Following every annual inspection, a label with the date of the last or the next annual inspection should be affixed on the equipment. If one of the damages or defects described above is observed, please contact a service center or the manufacturer to obtain help.

6.2 Maintenance

During a visual or annual inspection, the general condition of the system must be inspected, including the adapter, for the presence of cracks, excessive dirt, rust, warping or excessive wear. Make sure all necessary parts and components, including pins and straps are present. Ensure that all the bolts and nuts are properly tightened and all the labels can be read. Regularly clean the system components with water and a soft detergent. New labels can be obtained upon request. The results should be recorded in writing on the maintenance and inspection sheet.

Equipment maintenance can be done by a competent or qualified person, as well as a service center or the manufacturer. Equipment repair must be done exclusively by a service center or the manufacturer. Repairs will be supported for the designed life span of the system, after which they will no longer be supported.


6.3 Storage

Store the system in a dry and clean place, away from direct sunlight. The system must not come into contact with corrosive or aggressive materials, nor be stored in extreme temperatures. It is recommended to store and transport the anchorage connector and its components in specific packaging that can be obtained from the Manufacturer, Innova Public Utility Products, Inc., or one of its authorized resellers.


7. COMPONENTS

7.1 Temporary anchoring systems

8002-01

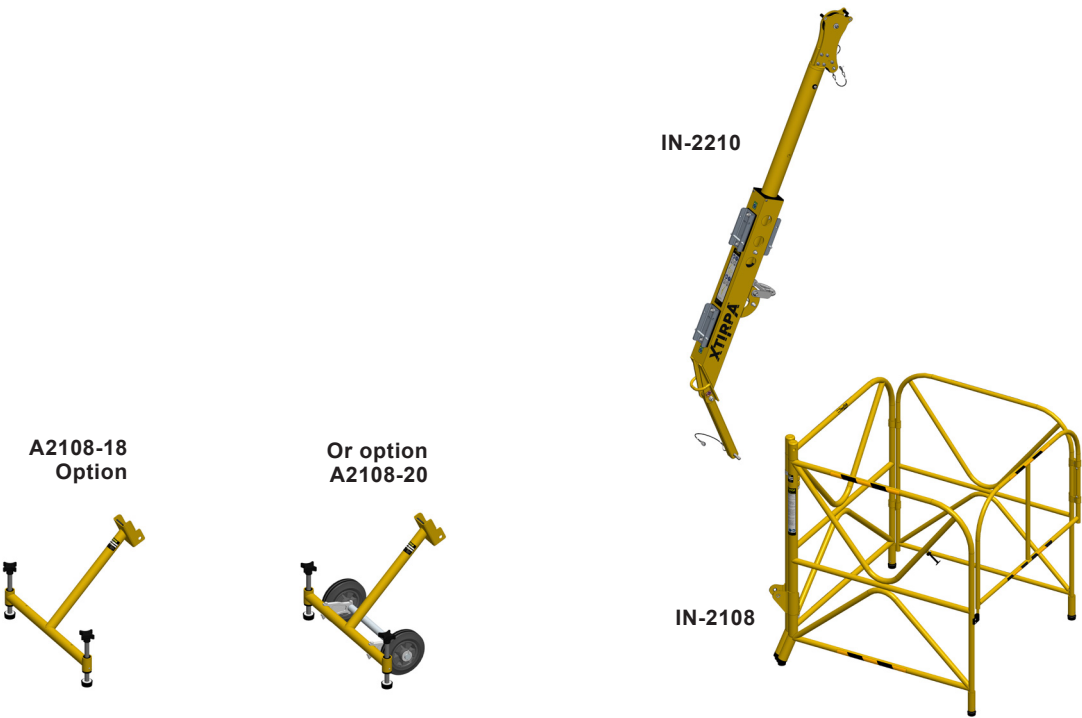

8002-02


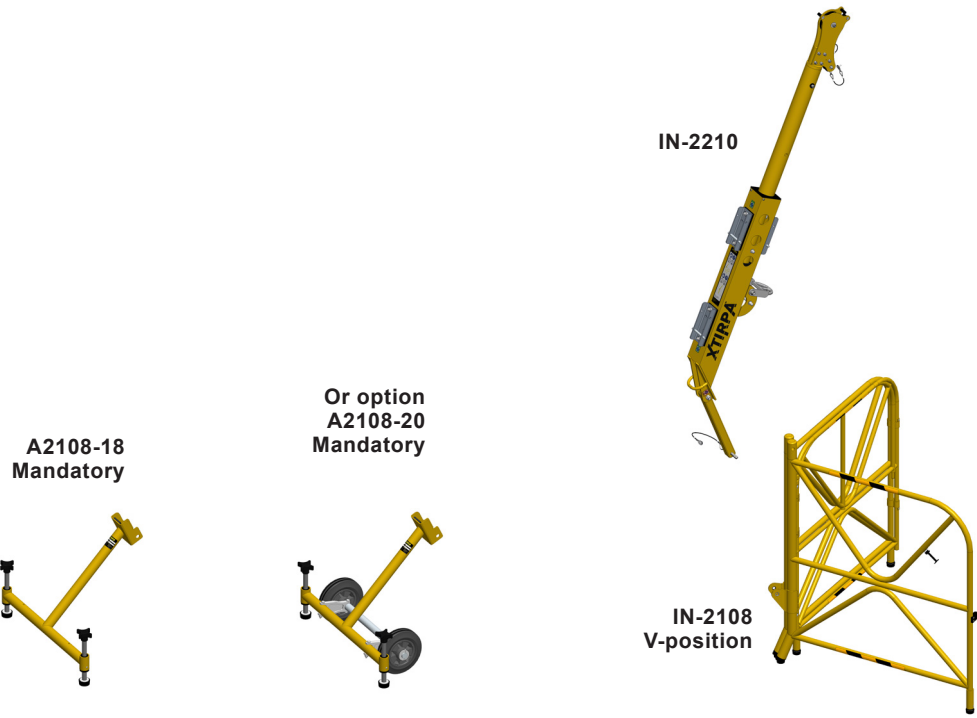


8. APPENDIX

8.1 Labels




SERIAL NUMBER LABEL

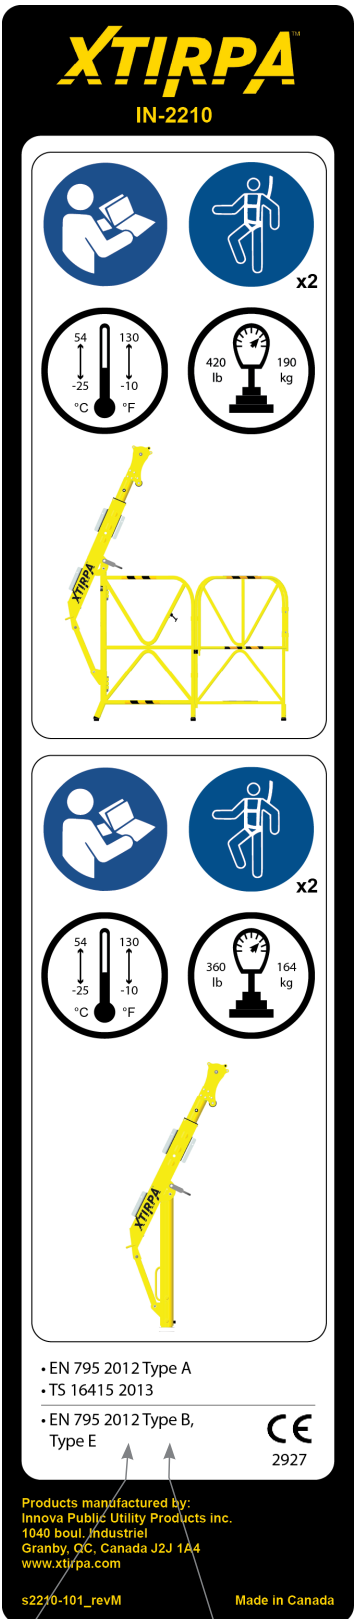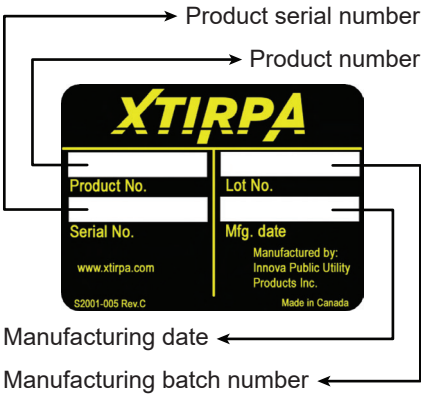

Accredited Standard No. Product standard

8.2 Calculation for ground clearance

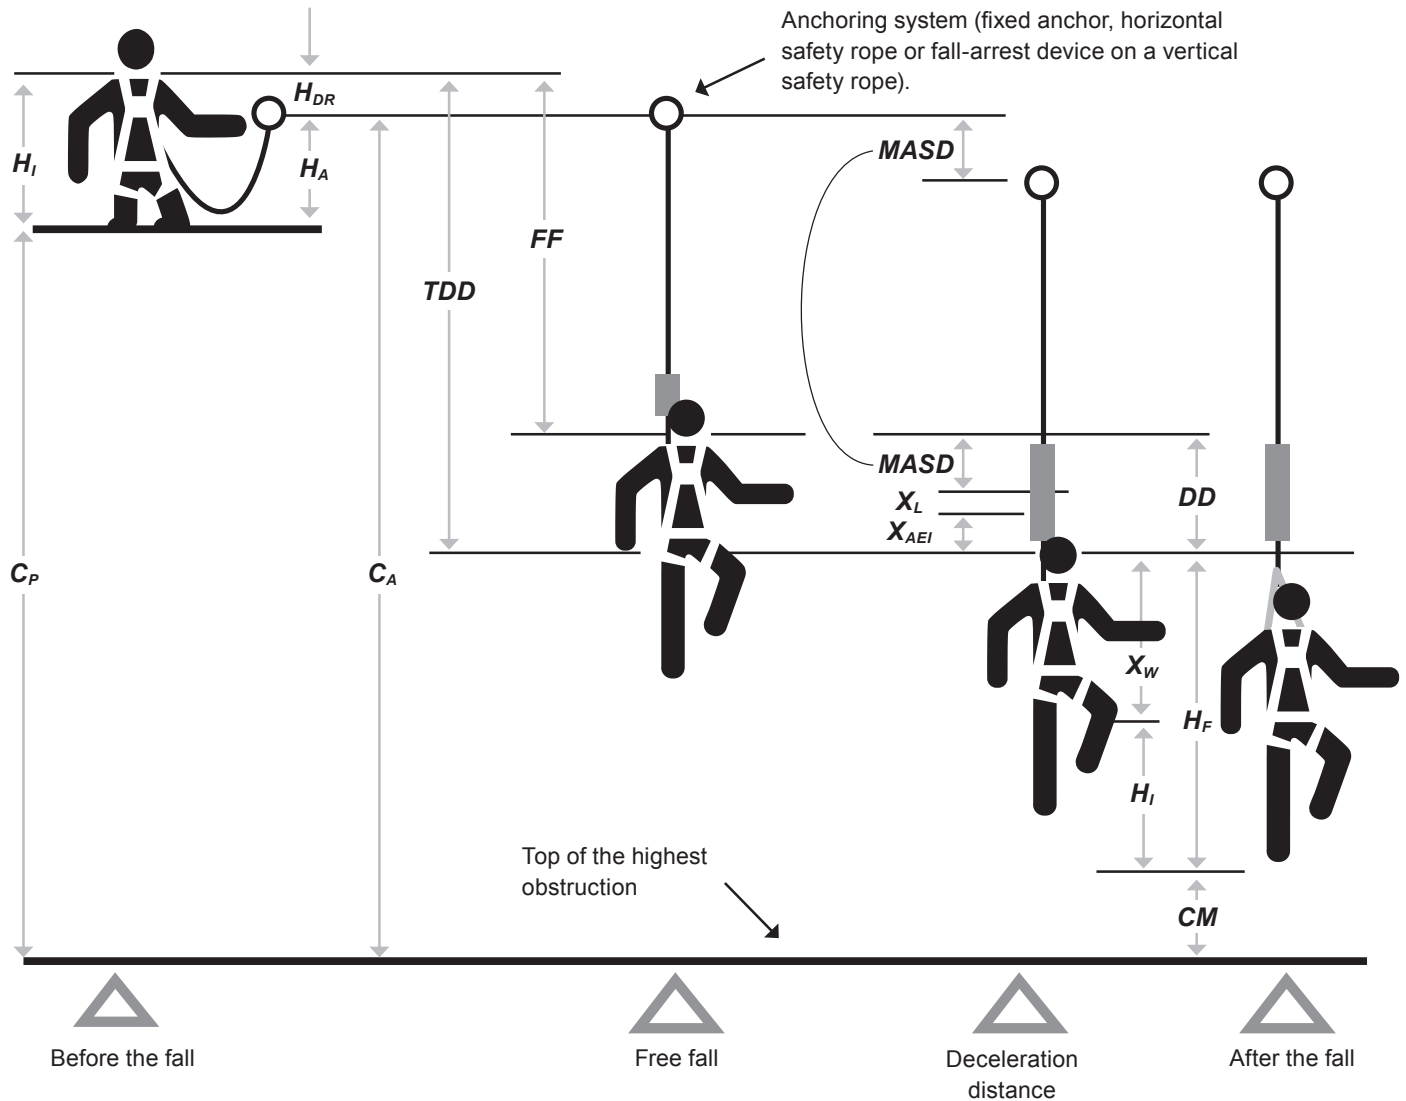

C_A Clearance required below anchor.
 $FF - H_{DR} + DD + H_F + CM$

FF Free fall.

C_P Clearance required below platform.
 $FF + DD + X_W + CM$
 $C_A - H_A$

DD Deceleration distance
 $MASD + X_L + X_{AEI}$

$MASD$ Maximum anchor system deflection (dynamic deflection of horizontal belay ropes, flexible anchors, vertical belay ropes, etc.).

TDD Total drop distance (from the worker's dorsal D-ring).
 $FF + DD$

CM Clearance margin.

H_A Height of anchor above work platform.

X_{AEI} Deployment of individual energy absorber or self-retracting safety cord with clutch.

H_{DR} D-ring height above anchor, da is negative if initially the D-ring is below the anchor).

H_F Final height of the D-ring (above the worker's toes) when the fall is arrested.

H_I Initial height of the D-ring (above the working surface) at the start of the drop.

X_L Stretching of the safety cord.

X_W Length after stretching (due to inversion and slippage of the D-ring, the entire harness and the elongation of the worker's body).

XIPAX™

MAINTENANCE AND INSPECTION LOG



Product:

Purchasing date:

Model number:

Serial number:

Manufacturing date:

Date of next inspection: _____

Date of 1st use:

[illegible]

COMMENTS:

*Any failure to follow the Manufacturer's instructions contained in the Instruction and safety manual, including with regard to the inspection and maintenance of the XTIRPA system and of components and parts thereof, will cause warranty to become null and void and may result in serious injury or death of the user, for which the Manufacturer disclaims all warranties and liabilities whatsoever, user, owner and purchaser of the XTIRPA system waiving all claims, rights and recourses against Manufacturer and derived there from.

Manufactured by: INNOVA Public Utility Products Inc. 1040 boul. Industriel, Granby, Quebec, Canada J2J 1A4
Tel: (450) 777-1240 Fax: (450) 372-9936

8.4 Registration form

X^{TIRPA}™

REGISTRATION LIMITED WARRANTY FORM

Innova
Produits de Services Publics - Public Utility Products Inc.

This warranty applies only to the original purchaser and is the only one applicable to the Xtirpa System, and is in lieu of all other warranties, expressed or implied. The purchaser has to complete and return to INNOVA Public Utility Products Inc., all information within thirty days of purchase. Otherwise limited warranty will be void, if the product is not registered.

Register now : Mail or fax this registration form or visit our web site and register online.
Mail : Produits services publics Innova Inc., 1040, Boul. Industriel, Granby J2J 1A4
Fax : (450) 372-9936
Web site : www.xtirpa.com

X^{TIRPA} PRODUCT

Product : _____ Purchasing date : _____
Model number : _____ Manufacturing date : _____
Serial number : _____ Supplier : _____

CUSTOMER / USER INFORMATION

Company : _____ Phone : _____
Street address : _____ Fax : _____
City : _____ State : _____ E-Mail : _____
Zip : _____

Name : _____ Do you wish to be on Innova's mailing for new product literature: :



Position : _____ YES ☐ NO ☐

*Anyf allureto followth eM anufacturei-rns tructioncso ntaineidn thel nstructionbann ds afetym anuati,n cludinvg ithr egardtho thei inspectioam dm aintenancoefft heX TIRPAs systema ndo f componentatn dp artst hereo f,w ilic ausew arrantthyo becomen ulla ndv oida nd mayr esullin seriousin juryo r deattho f theu ser,f or whicht he Manufactureirs claimas l warrantieasn di labillieus hatsocveur, s er,o wnara ndp urchasoorf theX TIRPAs systemw aivinga ll claims,r i ghitsa ndr ecourseasg ans/Mt anufacturaent dd erivedth eref rom.

Manufactured by: INNOVA Public Utility Products Inc. 1040 boul. Industriel, Granby, Quebec, Canada J2J 1A4

Tel: (450) 777-1240 Fax: (450) 372-9936

8.5 Schematic Plan of the Installation

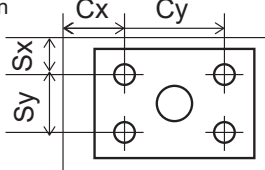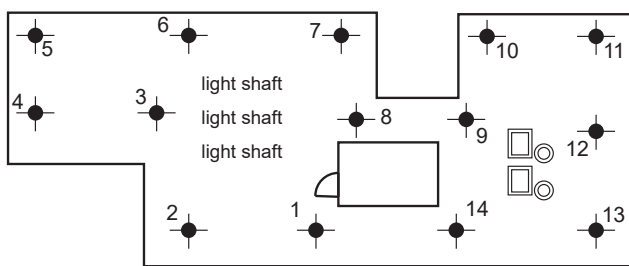Schematic plan of the installation			
Building/Structure			
Address: _____		Type of order: _____	
Notes: _____		Shape of the roof: _____	
Order number: _____		Anchoring device: _____	
Client			
Name: _____		Telephone number: _____	
Address: _____		Contact: _____	
Installer			
Name: _____		Chief installer: _____	
Address: _____		Telephone number: _____	
Anchoring device			
Manufacturer: _____			
Model/type of identification: _____			
Building's component			
Component 1: for example, concrete ceiling _____		Minimal thickness: for example: 250mm _____	
Component 2: for example, concrete post _____		Minimal thickness: for example: 500mm _____	
Construction material: for example, reinforced concrete _____		Quality: for example: C25/30 _____	
Fasteners/studs			
☐ Data related to the fasteners Data not required in case of a transversal fastener Real situation		Diameter of the drill hole: _____ mm Depth of the drill hole: _____ mm Torque: _____ Nm Distance of the Cx edge: _____ Sx axial spacing: _____ Cy : _____ Sy : _____	
		Type : _____ Material: _____ Minimal distance from edge (c): _____ Minimal axial spacing (s): _____ Minimal thickness of the component: _____ Admissible tensile strength: _____ Admissible breaking strength: _____	
Notes: _____ Drilling method: _____ Trial device: _____		☐ Hammer ☐ Rotating ☐ Torque wrench ☐ Cleaning of the drill hole ☐ Trial device for the fasteners ☐ Impact	
		☐ System ☐ Humid ☐ Dry ☐ Yes ☐ No ☐ Yes ☐ No	
Control list:		Floor plan of the roof:	
☐ Substrate, subject to exceptions (no doubt on the capacity) ☐ The installation respects the manufacturer's instructions ☐ Recommended fasteners used ☐ All the fasteners photographed with an identification number ☐ Visible fasteners ☐ Installation plan affixed on site ☐ Immobilization of the screws by mounting holes ☐ Additional details _____			
Breakout strength (kN), torque required (Nm)?			
Anchorage point 1 _____		Anchorage point 5 _____	
Anchorage point 2 _____		Anchorage point 6 _____	
Anchorage point 3 _____		Anchorage point 7 _____	
Anchorage point 4 _____		Anchorage point 8 _____	
Anchorage point 9 _____		Anchorage point 13 _____	
Anchorage point 10 _____		Anchorage point 11 _____	
Anchorage point 12 _____			
Additional fasteners: _____			
Notes from the Chief installer: _____			
Date: _____		Signature: _____	



SAFETY SOLUTIONS FOR CONFINED AREAS

Head office and manufacturing plant

Innova Public Utility Products Inc.
1040, Boulevard Industriel
Granby, Qc, Canada
J2J 1A4

Phone: 450.777.1240
Toll-free: 1.800.461.1937

www.xtirpa.com



XTIRPA is a registered trademark of
Innova Public Utility Products Inc.
used under license in Canada

MU8002-EN-(fr-ca)_rev07.01
Printed in Canada
November 2025